

INFRATECH
HI-INTENSITY MEDIUM WAVE
INFRARED CURING SYSTEMS



USER ' S MANUAL

MEDIUM WAVE SYSTEMS

MODELS: S 2005 & S 2005 IR

Congratulations on your purchase of an INFRATECH HI-Intensity Medium Wave Curing System. These systems have been designed, tested and engineered to give optimum performance, ease of operation and many years of reliable, productive use.

INFRATECH uses the latest technology and the best components available when designing and manufacturing our infrared paint curing systems. From our long lasting elements to our new *Digital* automatic temperature control system that allows for curing by time and temperature that provide the fastest, most accurate curing available.


Manufactured and Distributed By:

INFRATECH Division
Seachrome Corporation
939 North Vernon Avenue
Azusa, California 91702
(626) 331-9400 FAX (626) 858-1951
www.infratech-usa.com

UNPACKING & ASSEMBLING YOUR NEW SYSTEM

Unpacking & Assembling

1. Check for visible damage and notify carrier if any exists.
2. Carefully remove all packing, bubble pack, and cardboard boxes on the bottom of the pallet.
3. Remove wooden brackets bolted to top of stand to free top arm assembly.
4. The top arm is pre-assembled and wired ready to insert into the vertical posts of the main stand assembly. The brackets are designed to accept the top arm and hold it in place while you use the same bolts that held the wooden shipping brackets in place to secure the top arm in place.
5. Unbolt the stand from the wooden shipping pallet and remove the system from the pallet.
6. Open the small cardboard box and remove the casters and hardware.
7. Attach the casters in the four holes provided and secure them using the lock washers and nuts provided.
8. NOTE: To prevent breakage, unit is shipped without the element installed. See installation instructions below.
9. Open the long cardboard box and remove the Quartz Tubes.
10. Remove end reflectors and guard from each heater.
11. There is a wire with ring terminal on each end of the Heater (under the reflector). Connect the wires to the Elements taking care to get a tight connection.
12. Insert the two Elements marked 4000 watts into the two Heaters on the top arm assembly.
13. Insert the three Elements marked 3000 watts into the three lower Heaters.
14. Refer to operating instructions before using the Heater.

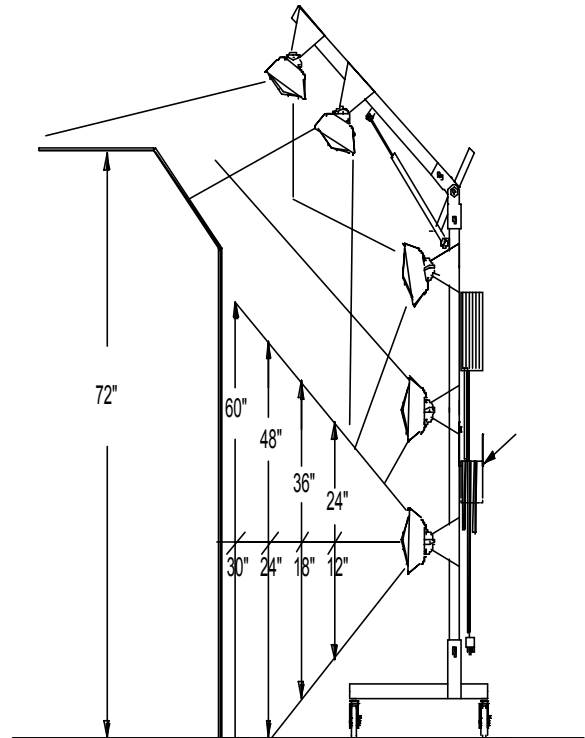

ELEMENT INSTALLATION

NOTE: To prevent breakage, unit is shipped without the element installed.

1. Remove end plates.
2. Open element clips at each end of Heater and carefully install quartz tube. Remove one nut from end of element. Slip on wire over element screw. Replace nut. **NOTE:** Hold element ceramic firmly while tightening nut to prevent damage to element. Nut should be tightened snug, as loose connection could cause element to fail. Connect other side of element in like manner. Close element clips over tube.
3. Replace end plates.
4. Clean tube and reflector with alcohol or equivalent.
5. Snap on grill provided.

SPECIFICATIONS	
Model #	S 2005
Part #	16-1030
Volts	240V Single Phase
Amps	37.5
Watts	17,000
Shipping WT.	284 lbs.
Length	61"

WARNING:

- NEVER block front of heater ● DO NOT operate within 25' of flammable materials ●
 - DANGER: Do not use within 10' when spraying operations are in progress ●
 - NEVER service heater without disconnecting from power ●
 - Source of possible shock ● Use only with grounded power source ●
- Only use grounded extension cords that are rated for the amp load of these units. ●

S 2005 ASSEMBLY INSTRUCTIONS

Ref #	Part #	Description
1	10-2030	E-3024 3000W 240V 58"
2	10-2055	E-4024 4000W 240V 58"
3	13-1090	LOCK/NUT MAL 1/4-20 X 9/16"
4	13-1200	W HEATER REFLECTOR (S2005)
5	13-1210	W HEATER END REFLECTOR (S2005)
*	13-1230	W HEATER LEAD WIRE SET (S2005)
6	13-1240	W HEATER GRILL (S2005)
7	13-1490	SHOCK ARM
*	13-1470	2 POLE 60 AMP MERCURY RELAY
8	13-1605	SHOCK STOP ARM
9	13-1614	5" LOCKING CASTER
10	13-1617	240V 50 AMP PLUG
11	13-1520	50' POWER CORD SO 8 GA 3 WIRE
*	15-1000	150 VA TRANSFORMER
*	15-1160	250V 40 AMP HEATER FUSE
*	15-1150	600V 1.5 AMP MIDGET FUSE
*	16-1170	250V 1.6 / 10 AMO FIME
*	15-1200	ON-DELAY TIMER
*	15-1215	REPEAT CYCLE TIMER
*	15-1220	15 SECOND PERCENT TIMER

Operating Tips

Your new Infratech infrared curing system provides fast, efficient curing for virtually every type of paint, primer, body filler, bonding adhesive and plastic repair products. Infratech infrared heats from the inside out. It does not heat the air.

The way IR cure's, you first heat the coating for the prescribed time to effect solvent evacuating and cross linking, the cure cycle is complete after the heated area cools back to room temperature. Once this full cycle is complete the coating is fully cured and final assembly or cleanup for delivery can start.

Care should be taken when using your new system. Operating the system to close to the part being cure can cause damage. When you first use your system, you may want to start at a distance of 24" to 30". As you gain experience using you system, you may be able to move the system closer to apply more heat and speed the cure cycle. These heaters have enough power to blister paint and melt plastic if proper care is not exercised.

Additionally, it should be noted that different colors absorb IR at different rates; black absorbs IR far quicker than white. So darker colors may cure faster than lighter colors. Adjustments in distance may have to be made to

HEATED AREA	CURE TIME	HEAT SETTING*	PAINT TYPE/DISTANCE
upper 6' x 4' lower 6' x 5'	6 minutes	80%	Water Based Primer Heater Placed 24" Away From Surface
upper 7' x 5' lower 7' x 6'	10 minutes	100%	Water Based Primer Heater Placed 36" Away From Surface
upper 6' x 4' lower 6' x 5'	10 minutes	70%	Solvent Based Primer Heater Placed 24" Away From Surface
upper 7' x 5' lower 7' x 6'	15 minutes	80%	Solvent Based Primer Heater Placed 36" Away From Surface
upper 6' x 4' lower 6' x 6'	18 minutes	70%	High Solids Clear Topcoat Heater Placed 24" Away From Surface
upper 7' x 5' lower 7' x 6'	20 minutes	80%	High Solids Clear Topcoat Heater Placed 36" Away From Surface
upper 6' x 4' lower 6' x 5'	20 minutes	70%	Urethane Clear Coat Heater Placed 36" Away From Surface
upper 6' x 4' lower 6' x 5'	20 minutes	70%	Polyurethane Clear Coat Heater Placed 36" Away From Surface
upper 6' x 4' lower 6' x 5'	20 minutes	70%	Acrylic Enamel Heater Placed 36" Away From Surface
upper 6' x 4' lower 6' x 5'	15 minutes	80%	Lacquer Heater Placed 36" Away From Surface

SETTING UP DIGITAL CONTROL SYSTEM

CONTROL BOX FUNCTIONS

S 2005

2 ZONE
CONTROL




CONTROL BOX FUNCTIONS

S 2005 IR

2 ZONE

With
Digital
Auto-Temp
CONTROL

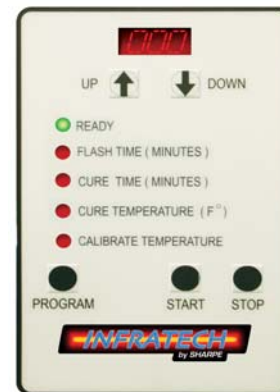

Control System Factory Presets:

Flash Time: 3 Min.

Cure Time: 30 Min.

Intensity: 75%

Modifying Control Settings:

With system plugged in to power and power light on, but prior to starting system, you can change the factory pre-sets.

To Change Flash Time: Press program button until flash time led flashes, use arrow up or down buttons to increase or decrease time displayed. When light stops flashing, new time is locked into memory.

To Change Cure Time: Press program button until cure time led flashes then use exact same procedure as described above to adjust cure time.

To Change Intensity Setting: Intensity setting are required for all three zones (heaters). You may operate one, two or all three zones at the same intensity or three different settings as required by specific circumstances. Press program button until first intensity led flashes, use arrow up or down buttons to increase or decrease percent of power output displayed. Repeat for zones two and three as desired. When light stops flashing, new settings are locked into memory.

Changes During Operation: With system operating you can change any setting by using the above instructions.

IR Control System Factory Presets:

Auto-Temp Control Factory Presets:

Flash Time: 3 Min.

Cure Time: 30 Min.

Temperature: 130° F

Modifying Control Settings:

With system plugged in to power and "Ready" light on but prior to starting system you can change the factory pre-sets.

To Change Flash Time: Press program button until flash time led flashes, use arrow up or down buttons to increase or decrease time displayed. When light stops flashing, new time is locked into memory.

To Change Cure Time: Press program button until cure time led flashes then use exact same procedure as described above to adjust cure time.

To Change Temperature Setting: Press program button until cure temperature led flashes, use arrow up or down buttons to increase or decrease temp displayed. When light stops flashing, new setting is locked into memory.

Changes made prior to starting the system will be locked into memory until you change settings using the above procedures.

Changes During Operation: With system operating you can change any setting by using the above instructions. **However**, any changes made when the system is operating will not be held in memory after the current operating cycle.

Change Temperature Calibration: The infrared sensor controller is factory calibrated to +/- 3° F. If you wish to re-calibrate the control, press the program button until the calibra led flashes. Use the arrow up/down buttons to change the setting to match your measuring interment.

Working With Infrared & Paint

Every coating system, applicator and shop have many variables (type of material, thickness applied, type of reducer, air temperature and ambient moisture content) that come into play when applying and curing coating systems. All these variables must taken into consideration when setting curing time settings and power intensity settings. The following is our recommendation to establish the correct setting for you shop.

1. Mix paint for the current weather conditions in your area as recommended by manufacturer.
2. Start with an intensity setting of 75% power (default setting).
3. Set cure time according to product being cured (refer to cure time chart).
4. If the job is not cured, add more time at the same intensity to complete the job.
5. For the next job using the same materials, increase intensity 5% (or 10% max.) and use the same recommended time.
6. At the first sign of solvent pop, back the intensity down 5% and use that setting down 5%.